

**⊥** Download



Edit Save as... ∨ Ø Edit











# **Specifications**

Frequency: 433.39 MHz.

Security: 128-bit AES encryption.

Range: up to 50 metres. Battery life: up to 10 years. Battery type: 14500 mA battery.



## **Wireless Vehicle Detection System**

**EL00IG and EL00IG-RAD** 

### Installation in 3 simple steps


#### STEP 1:

Coding e-LOOP into e-Trans 50

#### Coding e-LOOP without magnet

- 1. Power up the e-TRANS-50 and hold the e-Loop within 10cm of the transceiver's antenna.
- 2. Now press and release the CODE button on the e-Trans 50. The yellow and red LEDs will flash on the e-Loop, and the blue LED on the e-TRANS-50 will flash 3 times. The systems are now paired.

NOTE: For coding e-TRANS-200 LCD transceivers, refer to e-TRANS-200 manual.

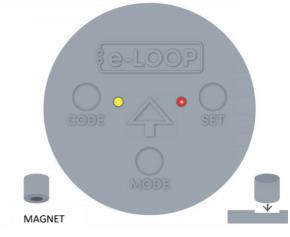

PLACING MAGNET BUTTON RECESS.

Coding e-LO	E-LOOP INGROUND INSTRUCTIONS 2022.pdf									
Power up t CODE butt light up.		139%				1 of 2				