

## 24V 1.5A EN54-4 Switch Mode PSU

Part No. BF562-1



## **Overview**

- Certified to EN54-4/A2 by the LPCB and VdS.
- A powerful switch mode/digital hybrid PSU that can be customised\* to suit your exact requirements see More Information tab for details.
- Plastic cover on PSU PCB guards against touching live parts.
- Includes a single-pole voltfree changeover relay that switches for any fault condition.
- Multiple indicators supply present, general fault, fault type & aux. equipment fault.
- Two selectable battery charge currents.
- Battery fault impedance limits can be optimised to suit load current (helps extend battery life)\*.
- Mains fail simulation mode.
- Improved on-board temperature sensor with optional remote sensor.
- Electronic functions comply with EN50131-6 grades 1-4 for security applications.
- BF562-1/E Encased PCB version available.













C-TEC, Challenge Way, Martland Park, Wigan, WN5 0LD, UK





















## **More Information**

TYPICAL USES Ideal for powering beam detectors, auto-dial communicators, aspirating smoke detectors, auto-open vent systems, auxiliary sounder systems or any other device performing a mandatory function of a fire alarm system. PSU CUSTOMISATION The BF562-1 can be customised to suit your exact requirements using a BF423 configurator & PC. Configurable parameters include float voltage temperature compensation, battery charge rate (mA), battery impedance and configurable Input/Output settings. \*It is important to note changing the PSU's parameters in this way is outside the scope of EN54-4 and any changes must be tested by the responsible person for correct operation. PSU STATUS LED (located on the PSU PCB) 1 flash = Mains Failure. 2 flashes = Battery Voltage Low. 3 flashes = Battery Voltage Critical. 4 flashes = Charger Failure. 5 flashes = Charger OK (Battery is either actively charging, or in float charge). 6 flashes = No Batteries Fitted (indicating DIP Switch 4 position). 7 flashes = Battery Resistance Fault (Level set by DIP Switch 2 position). 8 flashes = Output Over Voltage.

BATTERY FAULT MONITORING The BF562-1 complies with EN54-4/A2 and therefore must monitor battery resistance. The fault threshold is directly related to the ability of the battery to deliver the rated current to the load. For example, batteries stored uncharged for long periods, during shipment and/or distribution, degrade leading to increased internal resistance. If a degraded battery is fitted, a fault will be shown by the PSU as mandated by EN54-4/A2. DATA PORT Data on the BF562-1's status can be extracted from the PSU's bi-directional data port. The data available includes thermistor measurements; battery terminal voltage; system voltage at load terminals; battery charge current; load current; battery impedance and ASCII text string status messages. Extracting this data requires additional equipment and permissions - contact C-TEC for details.



















## **Technical Specifications**

Approvals/certifications Certified to EN54-4/A2 by the LPCB & VdS.

A boxed Mains to regulated DC power supply providing 1.5A @ 24V DC. It includes a single pole volt-free Application/operation

changeover relay that switches for any fault condition. User customisable via a BF423.

230V 50/60Hz. Mains supply Mains rated current 400mA r.m.s.

Total output current limited to 1.5A (Max. output current).

I max.a: 1A or 0.5A selectable. A load greater than I max.a will temporarily reduce batt. charging. I.max.b: Output

1.5A, charging turned off via CONN6. Output is also customisable via a BF423 Config

2Ah to 17Ah (Note Max. battery size/type determined by cabinet size is 17Ah VRLA). Output is Battery charge capacity

customisable via a BF423 Configurator to suit different manufacturers' batteries\*.

Max battery size and type 2 x 12V 17Ah VRLA (min. size is 2 x 12V 2Ah).

3 external - Supply Present (green); General Fault (amber); Auxiliary Fault (amber) and 2 internal -Indicators

Hazardous Voltages Present (red) and PSU Status (amber).

Mains Input (CONN1); Supply Output (CONN3); Battery Input (CONN3); Fault Relay (CONN4); Charge Off Connections

Input (CONN5). Battery Charge Current Link (PLK1); Battery Monitoring On/Off Link (PLK2)

**Expansion connections** A remote thermistor can be connected via PL3 terminals.

Product dimensions (mm) 404 W x 404 H x 110 D mm.

Construction & finish Metal lid and base; RAL7035 textured. IP30 (designed for indoor use only). IP Rating

Weight 5kg (without batteries).

Operating conditions/temperature -5°C to +40°C. Max relative humidity: 95%.

\*Parameters configurable via a BF423 configurator are: Float voltage temp. compensation; Batt. charge Notes

rate (mA); Batt. impedance; Configurable Input/Output settings.

















