

Enter User Code. You now have 5 secs to change modes. LEDs indicate the current mode.



- User Functions
- 0 To turn EXITGUARD to OFF mode
 - 1 To arm EXITGUARD in CHIME mode
 - 2 To arm EXITGUARD in KEY PAD RESET mode
 - 3 To arm EXITGUARD in AUTO RE-ARM mode

Advance User Set Up Functions

- 7 Press and hold 7 for SET-UP mode.

Give this number to staff who are allowed to arm or turn the EXITGUARD to OFF

If the SET-UP LED flashes then use only the codes below:-

If the SET-UP LED is steady enter the manager code MMMM.

The SET-UP LED will then flash then use only the codes below:-

- Advanced User Functions
- Escape from SET-UP mode and leave in the OFF mode
 - To change user code
 - Give this number to staff cleared to arm/disarm EXITGUARD
 - Add/change optional pass code. Allows passage through a door without the need to turn OFF and re-arm. Return passage is allowed using a pushbutton. Pass time is set by DOTL times.
 - Give this number to staff cleared to pass
 - To remove optional pass code change to User code UUUU. Note: DOTL times remain as already programmed.
 - Add or change optional manager code. To use the manager code you must use the User code first as explained above. Restrict this number to security cleared staff
 - Adding a manager code restricts the ability of users to change various parameters to try and breach security.
 - To remove optional manager code (change to user code UUUU)
 - Escape from SET-UP mode and leave in the OFF mode

Enter User Code. You now have 5 secs to change modes. LEDs indicate the current mode.



- User Functions
- 0 To turn EXITGUARD to OFF mode
 - 1 To arm EXITGUARD in CHIME mode
 - 2 To arm EXITGUARD in KEY PAD RESET mode
 - 3 To arm EXITGUARD in AUTO RE-ARM mode

Advance User Set Up Functions

- 7 Press and hold 7 for SET-UP mode.

Give this number to staff who are allowed to arm or turn the EXITGUARD to OFF

If the SET-UP LED flashes then use only the codes below:-

If the SET-UP LED is steady enter the manager code MMMM.

The SET-UP LED will then flash then use only the codes below:-

- Advanced User Functions
- Escape from SET-UP mode and leave in the OFF mode
 - To change user code
 - Give this number to staff cleared to arm/disarm EXITGUARD
 - Add/change optional pass code. Allows passage through a door without the need to turn OFF and re-arm. Return passage is allowed using a pushbutton. Pass time is set by DOTL times.
 - Give this number to staff cleared to pass
 - To remove optional pass code change to User code UUUU. Note: DOTL times remain as already programmed.
 - Add or change optional manager code. To use the manager code you must use the User code first as explained above. Restrict this number to security cleared staff
 - Adding a manager code restricts the ability of users to change various parameters to try and breach security.
 - To remove optional manager code (change to user code UUUU)
 - Escape from SET-UP mode and leave in the OFF mode