

How to use your HobWatcher

HW200

Unattended cooking can cause fires. This HobWatcher means that electric hobs can't be left on while unattended.

This device has been installed for your safety.

Cleaning

HobWatcher may be wiped down with a soft dry or a lightly dampened (not wet) cloth.

WARNING

Do not attempt to remove the cover or tamper with this device as it contains mains voltage and may cause serious injury.


Important Notes

The On/Off Isolator Switch is for isolating power to the hob in an emergency or for maintenance. Normally it can be left in the on position.

If you wish to turn the hob back on when the HobWatcher has switched off power to the hob, simply turn off all hob controls and press Start. The hob may then be turned back on immediately.

System Overview


Your HobWatcher will normally be located on the wall near to your hob, and you will find instructions on the front of it.

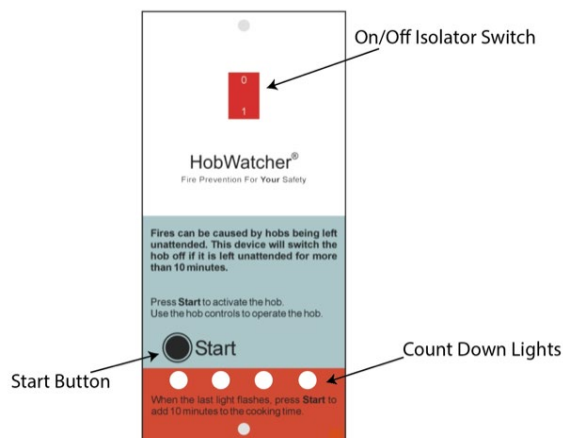


Operation



While the hob is turned off, the HobWatcher is in standby and there should not be any lights or beeping. To start cooking simply press Start on the HobWatcher and turn on the hob as normal. All of the HobWatcher's count down lights will come on to show that you have the full 10 minute cooking time available.

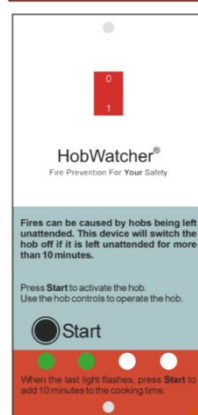

During the next 10 minutes the count down lights will gradually count down to indicate that cooking time is running out.

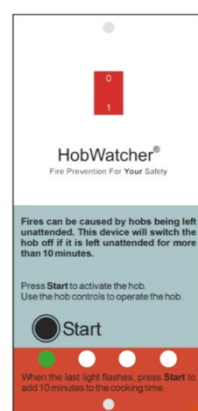

When approximately 20 seconds of cooking time remains, the last light will flash and a beep will be heard warning that the HobWatcher is about to switch the hob off. To continue cooking just press Start and another 10 minutes will be added to your cooking time.

Note that HobWatcher will not allow you to add to the cooking time until the last 20 seconds when the light is flashing as above.



If Start is not pressed within the last 20 seconds, the HobWatcher will switch power to the hob off and the HobWatcher will return to standby.